


Technical Information

SMA FUEL SAVE CONTROLLER Modbus[®] Interface

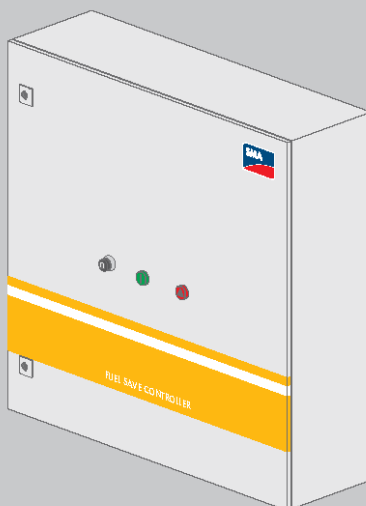

Legal Provisions

The information contained in these documents is the property of SMA Solar Technology AG. Any publication, whether in whole or in part, requires prior written approval by SMA Solar Technology AG. Internal reproduction used solely for the purpose of product evaluation or other proper use is allowed and does not require prior approval.

Trademarks

All trademarks are recognized, even if not explicitly identified as such. A lack of identification does not mean that a product or symbol is not trademarked.

Modbus[®] is a registered trademark of Schneider Electric and is licensed by the Modbus Organization, Inc.

SMA SOLAR TECHNOLOGY AG

Sonnenallee 1

34266 Niestetal

Germany

Tel. +49 561 9522-0

Fax +49 561 9522-100

www.SMA.de

E-mail: info@SMA.de

Copyright © 2017 SMA Solar Technology AG. All rights reserved.

Table of Contents

1 Information on this Document5

2 Safety7

2.1 Intended Use7

2.2 Skills of Qualified Persons7

2.3 Information on Data Security7

3 Product Description8

3.1 Modbus Protocol8

3.2 SMA Modbus Profile FSC-208

3.3 Extended Modbus Profile8

3.4 Plant Topology9

3.5 Addressing and Data Transmission in the Modbus Protocol.....9

3.5.1 Unit IDs9

3.5.2 Modbus Register Address, Register Width and Data Block10

3.5.3 Data Transmission10

3.6 Reading and Writing of Data10

3.7 SMA Data Types10

3.7.1 SMA Data Types and NaN Values.....10

3.7.2 32-Bit Integer Values11

3.8 SMA Data Formats.....11

4 Commissioning and Configuration12

4.1 Commissioning12

4.2 Configuration12

4.2.1 Sections12

4.2.2 Device Types12

4.2.3 Key-Value Pairs13

5 Installation.....14

6 Troubleshooting.....15

7 Technical Data18

7.1 Modbus Communication Port18

7.2 Data Processing and Time Behavior18

8 Contact 19

1 Information on this Document

Validity

This document is valid for the device type "FSC-20-M" (SMA Fuel Save Controller). It describes the Modbus interface of the SMA Fuel Save Controller, the variant of the communication protocol "Modbus® Application Protocol" implemented by SMA as well as the corresponding parameters, measured values and data exchange formats.

This document does not contain any information on software which can communicate with the Modbus interface (see the software manufacturer's manual).

Target Group

This document is intended for qualified persons. Only persons with appropriate skills are allowed to perform the tasks described in this document (see Section 2.2 "Skills of Qualified Persons", p. 7)

Additional Information

SMA Documents


Additional information is available at www.SMA-Solar.com:

Document title	Document type
SMA Fuel Save Controller	Installation manual
SMA Fuel Save Controller	Quick reference guide
SMA Fuel Save Controller	User manual

Additional Documents

Document title	Source
Service Name and Transport Protocol Port Number Registry	http://www.iana.org/assignments/service-names-port-numbers/service-names-port-numbers.xml
Modbus Application Protocol Specification	http://www.modbus.org/specs.php

Symbols

Symbol	Explanation
	Information that is important for a specific topic or goal, but is not safety-relevant

Nomenclature

Complete designation	Designation in this document
Modbus register	Register
SMA Fuel Save Controller	Fuel Save Controller

Abbreviations

Abbreviation	Designation	Explanation
PV	Photovoltaics	

2 Safety

2.1 Intended Use

The Modbus interface of the Fuel Save Controller is designed for industrial use and has the following tasks:

- Remote control of the grid-relevant parameters.
- Remote-controlled querying of measured values.
- Remote-controlled changing of parameters.

The Modbus interface can be used via TCP.

The enclosed documentation is an integral part of this product.

- Read and observe the documentation.
- Keep the documentation in a convenient place for future reference.

SMA reserves the right to modify the implementation of communication interfaces and protocols at any time without notifying the user. It is the user's responsibility to determine whether the downloaded content is up to date and to comply with it. SMA shall not be held liable for any damage as well as any assumption of consequential costs for customer systems by SMA that may result from the user's failure to do so.

2.2 Skills of Qualified Persons

The activities described in this document must only be performed by qualified persons. Qualified persons must have the following skills:

- Knowledge of IP-based network protocols
- Training in the installation and configuration of IT systems
- Knowledge of the Modbus specifications
- Knowledge of and compliance with this document and all safety information

2.3 Information on Data Security



Data security in Ethernet networks

You can connect the Fuel Save Controller to the Internet. When connecting to the Internet or a not protected local network, there is a risk that unauthorized users can access and manipulate the data of your system.

- Take appropriate protective measures, e.g.:
 - Set up a firewall
 - Close unnecessary network ports
 - Only enable remote access via VPN tunnel
 - Do not set up port forwarding at the Modbus port in use.

3 Product Description

3.1 Modbus Protocol

The Modbus Application Protocol is an industrial communication protocol that is currently used in the solar sector mainly for system communication in PV power plants.

The Modbus protocol has been developed for reading data from or writing data to clearly defined data areas. The Modbus specification does not prescribe what data is within which data area. The data areas must be defined device-specifically in Modbus profiles. With knowledge of the device-specific Modbus profile, a Modbus client (e.g. SCADA system) can access the data of a Modbus server (e.g. Fuel Save Controller).

The SMA Modbus Profile FSC-20 is the special Modbus profile for the Fuel Save Controller.

3.2 SMA Modbus Profile FSC-20

The SMA Modbus Profile FSC-20 contains definitions for the special system topology of a stand-alone grid system. A reduction of the available device data was performed for the definition and it was then assigned to the corresponding Modbus registers. The SMA Modbus Profile FSC-20 contains, for example, current power and consumption levels in the stand-alone grid.

3.3 Extended Modbus Profile

It is important for operators of PV-diesel hybrid systems to receive information at a very detailed level – down to each individual device within the plant. The devices often have their own Modbus interface, but communicating directly with them is discouraged as the additional communications within the plant can cause the power control system to fail.

Every Fuel Save Controller plant has its individual configuration. This makes it impossible to use the regular SMA Modbus Profile FSC-20 to monitor all connected devices (e.g. SMA PV inverter) within the Fuel Save Controller plant. The Extended Modbus Profile FSC was created to provide the flexibility needed to access each individual device within the plant without negatively affecting the plant control system.

The Extended Modbus Profile FSC can be used to assign channels of connected devices to user-defined Modbus registers. This is especially necessary when transferring larger numbers of channels from the Fuel Save Controller to the connected Modbus Client with a single Modbus request.

3.4 Plant Topology

The Extended Modbus Profile FSC was developed for a stand-alone grid. In such a structure, the Fuel Save Controller is a communication device that is equipped with a Modbus TCP/IP interface. All other devices of the stand-alone grid supply are connected via various fieldbus systems to the Fuel Save Controller.

From the perspective of the Modbus protocol, the Fuel Save Controller represents a Modbus server that provides a gateway to further devices of the stand-alone grid supply. The data of the devices connected to the Fuel Save Controller are only addressable via this gateway.

3.5 Addressing and Data Transmission in the Modbus Protocol

3.5.1 Unit IDs

The Unit ID is a higher-level addressing type in the Modbus protocol. The SMA Modbus Profile FSC-20 and the Extended Modbus Profile FSC do not necessarily have to use a Unit ID. However, we do recommend using Unit ID = 2.

3.5.2 Modbus Register Address, Register Width and Data Block

A Modbus register is 16 bits wide. The address of the first Modbus register in a data block is the start address of the data block. The number of connected Modbus registers results from the data type. Several Modbus registers with different start addresses, that can only be processed as a data block, are specially marked. In addition, larger data blocks can be formed.

3.5.3 Data Transmission

In accordance with the Modbus specification, only a specific volume of data can be transported in a single data transmission in a simple protocol data unit (PDU). The data also contains function-dependent parameters such as the function code, start address or number of Modbus registers to be transmitted. The amount of data depends on the Modbus command used and has to be taken into account during data transmission. You can find the number of possible Modbus registers per command in Section 3.6.

With data storage in the Motorola format "Big Endian", data transmission begins with the high byte and then the low byte of the Modbus register.

3.6 Reading and Writing of Data

The Modbus interface can be used via the protocol Modbus TCP. Using Modbus TCP enables read- and write access (RW, RO, WO) to the Modbus register.

The following Modbus commands are supported by the implemented Modbus interface:

Modbus command	Hexadecimal value	Data volume (number of registers) ¹
Read Holding Registers	0x03	1 to 125
Write Multiple Registers	0x10	1 to 123

3.7 SMA Data Types

3.7.1 SMA Data Types and NaN Values

The following table shows the data types used in the SMA Modbus Profile FSC-20 and the Extended Modbus Profile FSC and their possible NaN values. The SMA data types are listed in the **Type** column of the assignment table. They describe the data widths of the assigned values:

¹ Number of Modbus registers transferable as data block per command

Type	Description	NaN value
U32	A double word (32-bit).	0xFFFF FFFF
U32	For status values (ENUM), only the lower 24 bits of a double word (32-bit) are used.	0xFFFF FD
S32	A signed double word (32-bit).	0x8000 0000

3.7.2 32-Bit Integer Values

32-bit integers are stored in two Modbus registers.

Modbus register	1		2	
Byte	0	1	2	3
Bits	24 to 31	16 to 23	8 to 15	0 to 7

3.8 SMA Data Formats

The following SMA data formats describe how SMA data is to be interpreted. The data formats are important, for example, for the display of data or for its further processing. The SMA data formats are listed in the **Format** column of the assignment table.

Format	Explanation
ENUM	Coded numerical values. The breakdown of the possible codes can be found directly under the designation of the Modbus register in the SMA Modbus Profile FSC-20 and the Extended Modbus Profile FSC assignment table.
FIX0	Decimal number, commercially rounded, no decimal place.
FIX1	Decimal number, commercially rounded, one decimal place.
FIX2	Decimal number, commercially rounded, two decimal place.
FIX3	Decimal number, commercially rounded, three decimal place.

4 Commissioning and Configuration

4.1 Commissioning

The Modbus interface of the Fuel Save Controller is automatically activated after commissioning. The default configuration contains the SMA Modbus Profile FSC-20 and only needs to be changed if the Extended Modbus profile FSC is used.

4.2 Configuration

The Extended Modbus Profile FSC is configured using scada.ini. This file is structured as an ini file with sections and key-value pairs. You will find an example of a scada.ini file in the Excel file / extended Modbus profile FSC assignment table supplied.

4.2.1 Sections

A section describes the addressed device within the Fuel Save Controller plant. The section has the following form:

[<Device type><Device index>]

and is enclosed by square brackets.

The device index is the device number that starts with "1" in the Fuel Save Controller configuration. It can be read from the HMI of the Fuel Save Controller.

4.2.2 Device Types

The following table lists the device types that can be used with the Extended Modbus Profile FSC:

Device	Device Type
Fuel Save Controller and plant values	FSC
PV inverter	PV
Genset	GEN
Measurement devices	MEAS
Battery inverter	BAT
Meteo stations	METEO

Examples:

- Configuration of the third PV inverter:
[PV3]
- Configuration of the first genset:
[GEN1]

4.2.3 Key-Value Pairs

Key-value pairs are used to assign a device channel to a Modbus register. All available keys are listed in the Extended Modbus Profile FSC Assignment Table section (see www.SMA-Solar.com).

The assignment table provides the following information:

Information	Explanation
Device type	Device type for which the channel is available.
Description/number code(s)	Short description of the Modbus register and the number codes used.
Key	Key for the configuration file.
Type	Data type, e.g. U32 = 32 bits without prefix (see Section 3.7, page 10).
Format	Data format of the saved value, e.g. FIX0 = output without decimal places (see Section 3.8, page 11).
Access	Access type: RO: Read only RW: Read and write WO: Write only If an access type is not allowed, a Modbus exception is generated in the event of access with an access type that is not allowed.

Examples:

- Assign the current active power of a PV inverter to the register 100 (within the corresponding [PV*] section):
PwrAt=100
- Assign the aggregated PV active power to the register 50 (within the [FSC] section):
PvPwrAtTot=50

You will find an example of a scada.ini file in the Excel file / extended Modbus profile FSC assignment table supplied.

5 Installation

To install the configuration in the Fuel Save Controller, name the generated file "scada.ini" and copy it to the Fuel Save Controllers upload directory (/fsc/newfiles/) via FTP.

The Fuel Save Controller will have to be restarted after the upload (see the Fuel Save Controller installation manual).

6 Troubleshooting

Problem	Cause and corrective measures
The Fuel Save Controller cannot be accessed by the Modbus client.	<p>The correct IP address for the Fuel Save Controller may not be set in the Modbus client.</p> <p>Corrective measures:</p> <ul style="list-style-type: none">• Read off the IP address of the Fuel Save Controller (see router manual).• Ensure that the correct IP address for the Fuel Save Controller is set in the Modbus client (see the Modbus client manufacturer's manual). <hr/>
	<p>There may not be a network connection to the Fuel Save Controller.</p> <p>Corrective measures:</p> <ul style="list-style-type: none">• Check the network connection between the Fuel Save Controller and your Modbus client system. <hr/>
The Fuel Save Controller does not send a reply within the response time specified by the Modbus client.	<p>The Modbus server of the Fuel Save Controller may be currently overloaded.</p> <p>Corrective measures:</p> <ul style="list-style-type: none">• Extend the response time set in the Modbus client successively by one second respectively. <hr/>
	<p>It is possible that communication between the Modbus client and the Fuel Save Controller is disrupted. Check whether the entry value in Modbus register 40835 can be read off from register 31143 within one second.</p> <p>Corrective measures:</p> <ul style="list-style-type: none">• Check the electricity supply of the Fuel Save Controller.• Check the communication connections in the PV system for damages. <hr/>

A NaN value is reported in the Modbus client (see Section 3.7.1 "SMA Data Types and NaN Values", page 10).

You may be trying to read from a Modbus register that is not supported by the Fuel Save Controller.

Corrective measures:

- Contrast and compare the available measured values for the Fuel Save Controller with the Modbus registers requested by the Fuel Save Controller.

You may be trying to read from a Modbus register that is not defined in the SMA Modbus Profile FSC-20.

Corrective measures:

- Remove the register address used from the data processing.
- Install a newer version of the Modbus profile via a firmware update.

You may be trying to read from a write-only Modbus register.

Corrective measures:

- Read off the access type of the affected register from the "Access" column of the corresponding assignment table and correct it in the Modbus client.

Modbus exception 1 "Illegal Function" is reported in the Modbus client.

You may be trying to write to a data block whose target address range has registers that are not writable.

Corrective measures:

- Check whether all registers to be written to are writable.

Modbus exception 2 "Illegal Data Address" is reported in the Modbus client.

You may be trying to write to a Modbus register that is not defined in the SMA Modbus Profile FSC-20.

Corrective measures:

- Check the Modbus address to be written to in the Modbus client for errors.

You may be trying to read or write to a data block whose start or end address does not correspond with that of a register (alignment not correct).

Corrective measures:

- Check the start or end address of the data block.
- Check the register at the start or end address of the data block to be read for consistency. It may be that one of the two registers is inconsistent.

You may be trying to write to a data block and one of the registers to be written to are not supported by the device.

Corrective measures:

- Check whether the register to be written to is available from the Fuel Save Controller.

Modbus exception 3 "Illegal Data Value" is reported in the Modbus client.

You may be trying to write to a data block (Modbus commands 0x10) and one of the values has a data type that is not permitted.

Corrective measures:

- Read off the data type of the register to be written to from the "Type" column of the corresponding assignment table and correct it in the Modbus client.

Other Modbus exceptions

Corrective measures:

- For Modbus exceptions, see "Modbus Application Protocol Specification" at <http://www.modbus.org/specs.php>.
-

7 Technical Data

7.1 Modbus Communication Port

The following table shows the default setting of the supported network protocol:

Network protocol	Communication port, default setting
TCP	502

The Modbus communication port cannot be changed.

7.2 Data Processing and Time Behavior

In this Section you will find typical data processing and reaction times of the Modbus interface of the Fuel Save Controller as well as time information for saving parameters in SMA devices.

Signal run time through the Fuel Save Controller

The signal run time through the Fuel Save Controller is a maximum of 200 ms.

The signal run time is the time required by the Fuel Save Controller to process incoming Modbus commands and to forward them to the devices in the PV system.

Data transfer interval via the Modbus protocol

For system stability reasons, the time period between data transfers via the Modbus protocol must be at least 10 seconds.

Number of Clients

Only one Modbus client can access the Fuel Save Controller at a time. The Fuel Save Controller will reject any connection attempts from Modbus clients while another client is already connected.

Reaction time of the Modbus interface

The reaction time of the Modbus interface is 5 to 10 seconds.

The reaction time of the Modbus interface is the time between the arrival of the parameter specifications in the Fuel Save Controller until the corresponding measured values are provided to the Modbus interface of the Fuel Save Controller. Due to this reaction time, parameter specifications can only be displayed via a Modbus master system (e.g. a SCADA system) at a corresponding or larger interval.

8 Contact

If you have technical problems with our products, please contact the SMA Service Line. We require the following information in order to provide you with the necessary assistance:

- Device types and serial numbers of the modules of the Fuel Save Controller
- Error and warning messages displayed
- Type of generator control used

Danmark	SMA Solar Technology AG	Belgien	SMA Benelux BVBA/SPRL
Deutschland	Niestetal	Belgique	Mechelen
Österreich	SMA Online Service Center:	België	+32 15 286 730
Schweiz	www.SMA-Service.com	Luxemburg	
	Sunny Boy, Sunny Mini Central, Sunny Tripower:	Luxembourg	
	+49 561 9522-1499	Nederland	
	Monitoring Systems (Kommunikationsprodukte):	Česko	SMA Service Partner TERMS
	+49 561 9522-2499	Magyarország	a.s.
	Fuel Save Controller (PV-Diesel Hybridsysteme):	Slovensko	+420 387 6 85 111
	+49 561 9522-3199		
	Sunny Island, Sunny Backup, Hydro Boy: +49 561 9522-399	Polska	SMA Polska
	Sunny Central:		+48 12 283 06 66
	+49 561 9522-299	Ελλάδα	SMA Hellas AE
		Κύπρος	Αθήνα
			+30 210 9856666
España	SMA Ibérica Tecnología Solar,	France	SMA France S.A.S.
Portugal	S.L.U.		Lyon
	Barcelona		+33 472 22 97 00
	+34 935 63 50 99		

Bulgaria	SMA Italia S.r.l.	United Kingdom	SMA Solar UK Ltd.
Italy	Milano		Milton Keynes
Romania	+39 02 8934-7299		+44 1908 304899
<hr/>			
United Arab Emirates	SMA Middle East LLC Abu Dhabi +971 2234 6177	India	SMA Solar India Pvt. Ltd. Mumbai +91 22 61713888
<hr/>			
대한민국	SMA Technology Korea Co., Ltd. 서울 +82-2-520-2666		SMA Solar (Thailand) Co., Ltd. +66 2 670 6999
<hr/>			
South Africa	SMA Solar Technology South Africa Pty Ltd. Cape Town 08600SUNNY (08600 78669) International: +27 (0)21 826 0600	Argentina Brasil Chile Perú	SMA South America SPA Santiago +562 2820 2101
<hr/>			
Australia	SMA Australia Pty Ltd. Sydney Toll free for Australia: 1800 SMA AUS (1800 762 287) International: +61 2 9491 4200	Other countries	International SMA Service Line Niestetal Toll free worldwide: 00800 SMA SERVICE (+800 762 7378423)
<hr/>			

SMA Solar Technology

www.SMA-Solar.com

